

INTRALOT PRINTER MAINTENANCE

PRINTER HEAD

1. Allow the printer time to cool before cleaning.
2. Turn off the printer, open the hood, and remove the paper.
3. Remove any, large, visible debris.
4. Use canned air to clear out any dust from the printer.
5. Place a small amount of isopropyl alcohol on a cotton ball or lint free cloth leaving a small area free from moisture.
6. Wipe down the thermal printer head (colored green and black), on the inside of the front of the base, with the alcohol twice and then use the untreated area to dry the printer head.
7. Repeat until the cotton ball or cloth removes no more paint remnants.

PRINTER ROLLER

1. Prepare a cotton ball or lint free cloth just as you have for the printer head.
2. Clean the rollers in the same fashion as the printer head, turning the rollers by hand as each area is cleaned.

